


1. Only No.0 or No.00
2. Only clean grease
3. Only use grease gun to refill. It is prohibited to refill from the top of the cup

PISTON GREASE LUBRICATION SYSTEM DIAGRAM

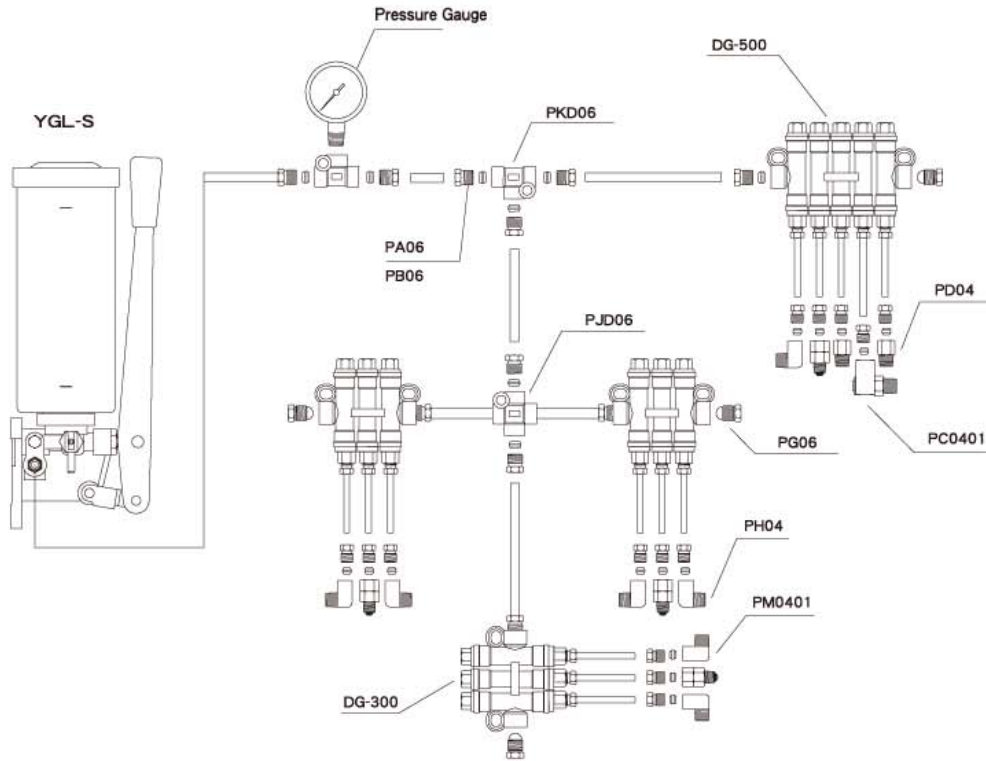

RESISTANCE GREASE LUBRICATION SYSTEM DIAGRAM

